



SUN PROCESS

FLOOR GRAPHIC INSTALLATION

APPLICATION INSTRUCTIONS

FLOOR TYPES

Su-Pro® floor graphics must be applied indoors to clean floors in excellent condition, and may be used on commercial floor tiles, sealed wood, sealed concrete, waxed vinyl, marble, terrazzo, and ceramic tiles.

FLOOR SURFACE

The floor surface must be in excellent condition, clean, and free of all oil, grease, and coatings. Other coatings, sealers, and paints must have excellent adhesion to the floor surface, or the decal may lift prematurely. Tiles should not be loose or uneven.

CONDITIONS

The minimum floor temperature is 50°F (10°C).

DECAL APPLICATION

Clean floor prior to application and dry thoroughly. Use an alcohol-moistened, lint-free paper towel to remove any grease or oil that may remain. Dry the surface again by wiping the alcohol before it evaporates to prevent leaving a residue.

Remove the liner from the back of the decal. Position the decal on the desired location of the floor.

Using a plastic squeegee (do not smooth decal with hands), apply the center of the decal with firm pressure. Continue with firm, overlapping strokes from the center out to each edge. ***Be sure that all edges and corners are firmly attached!***

Do not scrub or polish decal or surrounding area for at least 48 hours.

Do not overlap decals – butt all edges if multiple panels are used.

If possible, place the graphic away from entryways to minimize contact with rain and snow, as well as out of traffic areas of large equipment, such as forklifts.

MAINTENANCE

If any edge of the floor graphic decal lifts from the floor, the entire graphic must be removed immediately and replaced in order to prevent the risk of tripping.

Su-Pro® Ad-Mats floor graphic decals can be cleaned and maintained using routine floor maintenance procedures and equipment.

REMOVAL

To remove the decal, lift one edge and pull at an angle using short, quick tugs. If the floor was waxed previously, it is recommended that the area be waxed once the decal has been removed, since the wax may lift off with the decal.


STEP-1 Select location in high traffic area. Clean area of floor where graphic is to be applied.

STEP-2 When clean, lightly spray water over placement area to aid installation.


STEP-3 Starting at one corner, simultaneously peel backing paper and apply mat to floor. PRELIMINARILY, smooth out lightly with squeegee provided, starting at the center and working towards the edges.

STEP-4 When properly placed and aligned, finish smoothing out and adhering graphic, starting from the center and working towards the edges until all air bubbles are eliminated and graphic is absolutely flat.

STEP-3

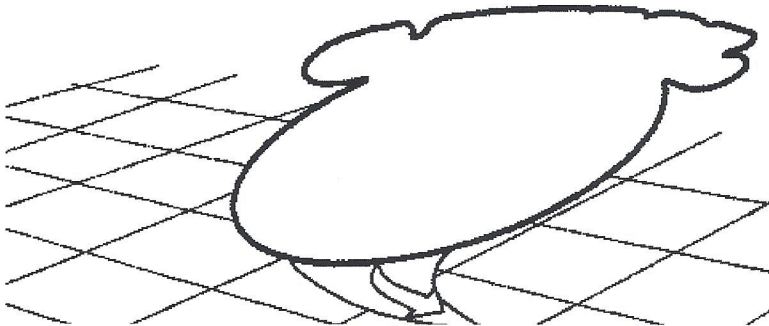

STEP-4

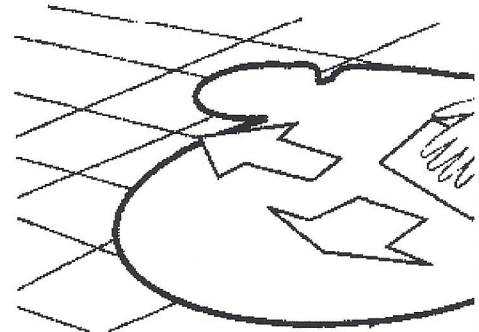

STEP-5 Wipe up any water remaining on the floor.

**THIS DECAL WILL NOT ADHERE PROPERLY IF FLOOR IS NOT CLEAN!
THIS DECAL IS INTENDED FOR INSIDE APPLICATION ONLY
IT IS NOT INTENDED FOR PLACEMENT ON CARPETED FLOORS**

IMPORTANT

To keep your graphic in like new condition, the graphic can be cleaned using ordinary surface cleaner.

THIS GRAPHIC, IF REMOVED, WILL NOT LEAVE A RESIDUE.

ISO 9001:2015

Sun Process Converting, Inc. is registered to ISO 9001:2015 standards

TECHNICAL INFORMATION

The technical information, recommendations and other statements contained in this document are based upon tests or experience that Sun Process believes are reliable, but the accuracy or completeness of such information is not guaranteed. They do not relieve the purchaser from the responsibility of examining the products upon delivery or provide assurance of the products suitability for a particular purpose. Suitability for any given application is the sole responsibility of the user.

SUN PROCESS CONVERTING, INC.

1660 Kenneth Drive, Mt. Prospect, IL 60056

TOLL FREE: (800) 323-0697 • IN ILLINOIS: (847) 593-0447 • Fax: (847) 593-0115

Website: www.sunprocess.com • Email: sales@sunprocess.com