




SUN PROCESS

COUNTER MAT INSTALLATION (AD-MAT)

STEP-1 Select location on counter. Clean area where Ad-Mat is to be applied.

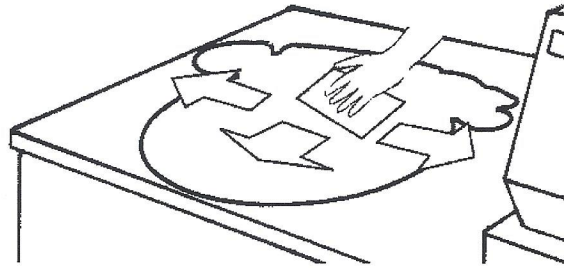

STEP-2 Peel off backing paper and apply Ad-Mat to counter.

STEP-3 When properly placed and aligned, finish smoothing out, starting from the center and working towards the edges until all air bubbles are eliminated and Ad-Mat is absolutely flat.

**THIS DECAL WILL NOT ADHERE PROPERLY IF COUNTER IS NOT CLEAN!
THIS DECAL IS INTENDED FOR INDOOR APPLICATION ONLY**

IMPORTANT

To keep your graphic in like new condition, the graphic can be cleaned using ordinary surface cleaner.

ISO 9001:2015

Sun Process Converting, Inc. is registered to ISO 9001:2015 standards

SUN PROCESS CONVERTING, INC.

1660 Kenneth Drive, Mt. Prospect, IL 60056

Toll Free: (800) 323-0697 • In Illinois: (847) 593-0447 • Fax: (847) 593-0115

Website: www.sunprocess.com • Email: sales@sunprocess.com